

# BP200 Quick Reference Guide

Thank you for choosing Juphoon uContact BP200 SIP Phone! Before you start using this phone, please check the contents in the product package first.

1	<input type="checkbox"/>	IP Phone (Main Body)	1 pc
2	<input type="checkbox"/>	Handset	1 pc
3	<input type="checkbox"/>	Handset Cable	1 pc
4	<input type="checkbox"/>	A/C Power Adapter	1 pc
5	<input type="checkbox"/>	Ethernet Cable	1 pc



## IP Address Setup

### Option1: Use DHCP

>Address Book Call Records	Speed Key >Network	>General Setting QoS
1. Press [ <b>□</b> ].	2. Press [ <b>▼</b> ] key until ">Network" is displayed on LCD, then press [ <b>√</b> ].	3. Press [ <b>√</b> ] again.
>WAN PC	>IP DNS	IP Type Manual
4. Press [ <b>√</b> ] again.	5. Press [ <b>√</b> ] again.	6. Press [ <b>√</b> ] again.
Manual >DHCP	System reboot. Please wait...	
7. Press [ <b>▼</b> ] key until ">DHCP" is displayed on LCD, then press [ <b>√</b> ], and then press [ <b>□</b> ].	8. Wait until the phone boot up again.	

### Option2: Use static IP Address

>Address Book Call Records	Speed Key >Network	>General Setting QoS
1. Press [ <b>□</b> ].	2. Press [ <b>▼</b> ] key until ">Network" is displayed on LCD, then press [ <b>√</b> ].	3. Press [ <b>√</b> ] again.
>WAN PC	>IP DNS	IP Type DHCP
4. Press [ <b>√</b> ] again.	5. Press [ <b>√</b> ] again.	6. Press [ <b>√</b> ] again.

>Manual DHCP	IP Type Manual	IP Address 127.0.0.1
7. Press [ <b>▼</b> ] key until ">Manual" is displayed on LCD, then press [ <b>√</b> ].	8. Press [ <b>▼</b> ].	9. Press [ <b>√</b> ].
IP Address: 192.168.0.45_	Net Mask 255.255.0.0	Net Mask: 255.255.255.0_
10. Use [ <b>Delete</b> ] key to delete backward, use [ * ] as • and number key [ <b>0</b> ] – [ <b>9</b> ] to input new value, then press [ <b>√</b> ].	11. Press [ <b>▼</b> ], then [ <b>√</b> ].	12. Use [ <b>Delete</b> ] key to delete backward, use [ * ] and [ <b>0</b> ] – [ <b>9</b> ] to input new value, then press [ <b>√</b> ].
Gateway 192.168.0.1	Gateway: 192.168.0.2_	System reboot. Please wait...
13. Press [ <b>▼</b> ], then [ <b>√</b> ].	14. Use [ <b>Delete</b> ] key to delete backward, use [ * ] and [ <b>0</b> ] – [ <b>9</b> ] to input new value, then press [ <b>√</b> ], and [ <b>□</b> ].	15. Wait until the phone boot up again.

Status: On	Address 192.168.0.250	Realm sip.juphoon.com
10. Set On like [STEP 7].	11. Press [ <b>▼</b> ]. then [ <b>√</b> ]. Use [ <b>Delete</b> ] key to delete backward, use [ * ] and [ <b>0</b> ] – [ <b>9</b> ] to input the SIP server IP address, then press [ <b>√</b> ].	12. Press [ <b>▼</b> ]. then [ <b>√</b> ]. Use [ <b>Delete</b> ] key to delete backward, use [ <b>1/a/A</b> ] to switch input method, use [ * ] and [ <b>0</b> ] – [ <b>9</b> ] to input the SIP server realm, then press [ <b>√</b> ] key.
Port 5060	Protocol UDP	Proxy >Registrar
13. Press [ <b>▼</b> ]. then [ <b>√</b> ]. Use [ <b>Delete</b> ] key to delete backward, [ <b>0</b> ] – [ <b>9</b> ] to input the SIP server port, then press [ <b>√</b> ] key.	14. Press [ <b>√</b> ]. then [ <b>▼</b> ] to select right transport type. Then press [ <b>√</b> ].	15. Press [ <b>X</b> ], then [ <b>▼</b> ].
Proxy >Registrar	Registrar >User	Auth Name username
16. Repeat [STEP 7] – [STEP 14].	17. Press [ <b>X</b> ], then [ <b>▼</b> ].	18. Press [ <b>√</b> ] then [ <b>▼</b> ] until "Auth Name" is displayed on LCD, then press [ <b>√</b> ].
Auth Name: 88880001_	Auth Password password	Auth Password: 123456_
19. Use [ <b>Delete</b> ] key to delete backward, use [ <b>1/a/A</b> ] to switch input method, use [ * ] and [ <b>0</b> ] – [ <b>9</b> ] to input the account name, then press [ <b>√</b> ] key.	20. Press [ <b>▼</b> ] until "Auth Password" is displayed on LCD, then press [ <b>√</b> ].	21. Use [ <b>Delete</b> ] key to delete backward, use [ <b>1/a/A</b> ] to switch input method, use [ * ] and [ <b>0</b> ] – [ <b>9</b> ] to input the password, then press [ <b>√</b> ] key.
12-18 12:14:17 1> 88880001		
22. Press [ <b>□</b> ]. The phone registered on the server.		

## VoIP Setup

>Address Book Call Records	Network >Advanced	Login Name: admin_
1. Press [ <b>□</b> ].	2. Press [ <b>▼</b> ] key until ">Advanced" is displayed on LCD, then press [ <b>√</b> ].	3. Press [ <b>1/a/A</b> ] key, then input "admin" by [ <b>0</b> ] – [ <b>9</b> ]. Then press [ <b>√</b> ].
Login Password: admin_	>Account 1 Account 2	>Status Proxy
4. Press [ <b>1/a/A</b> ] key, and input "admin" by [ <b>0</b> ] – [ <b>9</b> ].	5. Press [ <b>▼</b> ] key until find account you want to set and press [ <b>√</b> ].	6. Press [ <b>√</b> ].
Status: 1.On 2.Off	Status >Proxy	Status Off
7. Press [ <b>√</b> ] until the upper displayed on LCD. Then press [ <b>1</b> ].	8. Press [ <b>X</b> ], then [ <b>▼</b> ].	9. Press [ <b>√</b> ]. Now we in the Proxy submenu.

Hint: You can also setup the IP Address and VoIP account by web management on PC, while you need to find the phone's IP address in advance.

To find out the IP address.

**Step 1.**When the phone boot up with the first time it will display following on LCD:

00-00 08:00:10  
No Active User

It means you should set up at least one account in the phone. We use the web browser.

**Step 2.**Press [ Info] down on the phone. It will display the IP address of the phone on the LCD like:

192.168.0.46  
000008123110

**Step 3.**Input the IP address to the phone in the web browser, it will display like following



**Step 4.**Click Advanced on the left. It shows the login page. Login name is "admin" and password is "admin". It shows the Account page:



**Step 5.**Click "OK" when finish.

## Making Calls

Placing a call

Want to ...	Then ...
use the handset	Pick up the handset and dial the number.
use the speaker	Press [ <b>Speaker</b> ], and dial the number.
dial on hook	Press Number Keys directly.
redial the recently dialed number	Press [ <b>Redial</b> ]. See the "Redialing and Call History" for detail.
use Speed Dial	Press [ <b>0</b> ] – [ <b>9</b> ], then press [ <b>√</b> ].
dial the 2 <sup>nd</sup> call	Press [ <b>Hold</b> ]. and dial the number.

NOTE: You can press [ **√** ]. after editing or wait 5 seconds to dial out.

## Answering a call

Want to ...	Then ...
use the handset	Pick up the handset.
use the speaker	Press [ <b>Speaker</b> ]..
reject the call	Press[ <b>X</b> ].

## Holding a call

When...	Then ...
you want to hold a call	Press[ <b>Hold</b> ].
you want to resume a call on hold	Press [ <b>Hold</b> ] again.
there are 2 calls and you want to switch to another	Press [ <b>Hold</b> ]. The phone will hold the current call and switch to the other one.